

Compass 4.8.0 Updates for GALAXY, CAL, and RMServer



Compass 4.8.0 software requires the following firmware versions:

- GALAXY Firmware v2.3.0 (All models)
- Bluehorn 816 v2.3.0
- RMServer v2.7.0
- CAL v2.2.0

COMPASS FEATURES & ENHANCEMENTS

This version of Compass includes new firmware that allows Meyer Sound Galileo GALAXY™ processors to be booted in Spacemap Mode. Spacemap Mode is used when a GALAXY processor is part of a Spacemap Go system. The iPadOS app Spacemap Go provides control, which will be available from the Apple App Store upon public release. The Spacemap Go iPad app is a new spatial sound design and mixing tool that leverages the processing power of the Galileo GALAXY Network Platform to create immersive audio experiences.

NOTE: All Galileo GALAXY models support Spacemap Mode except Bluehorn 816.

Spacemap Go requires Galileo GALAXY to be running in **Spacemap mode**. The firmware that includes Spacemap Mode ships with Compass 4.8.0 software.

Download and install [Compass 4.8.0](#) from a desktop workstation (Mac or PC).

- Launch Compass and select **Processors > Inventory > Add Processor**.
- Choose a device type and enter a new Entity Name or accept the defaults by clicking on OK.
- Select **Use Virtual** to execute the launch of a virtual Galileo GALAXY processor.
- Select the virtual processor with the desired Entity Name, then select **Settings > Network**.
- Select **Reboot to (Spacemap mode)**.

Or connect to a physical Galileo GALAXY device: (The iPad and GALAXY Processor must be on the same network)

- Launch Compass and select **Processors > Inventory > Find Devices** from the Inventory tab.
- Connect the processor to update and select **Settings > Network**.
- Select **Reboot (to Recovery mode)**, wait for the reboot process to complete, then Select **Upload Firmware...**
- Select the 2.3.0-R3-20200705-2013.galaxyFirmware file from the Compass application directory.
- Once the firmware update is complete, the GALAXY will automatically reboot to Normal Mode.
- Select **Reboot to (Spacemap mode)**.
- Launch Spacemap Go and select the processor(s) to be connected to the Spacemap Go System.

The contents of this document are furnished for informational purposes only, are subject to change without notice, and should not be construed as a commitment by Meyer Sound Laboratories Inc. Meyer Sound assumes no responsibility or liability for any errors or inaccuracies that may appear in this document. Except as permitted by applicable copyright law, no part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, recording or otherwise, without prior written permission from Meyer Sound.
