


USW-210P Compact Narrow Subwoofer

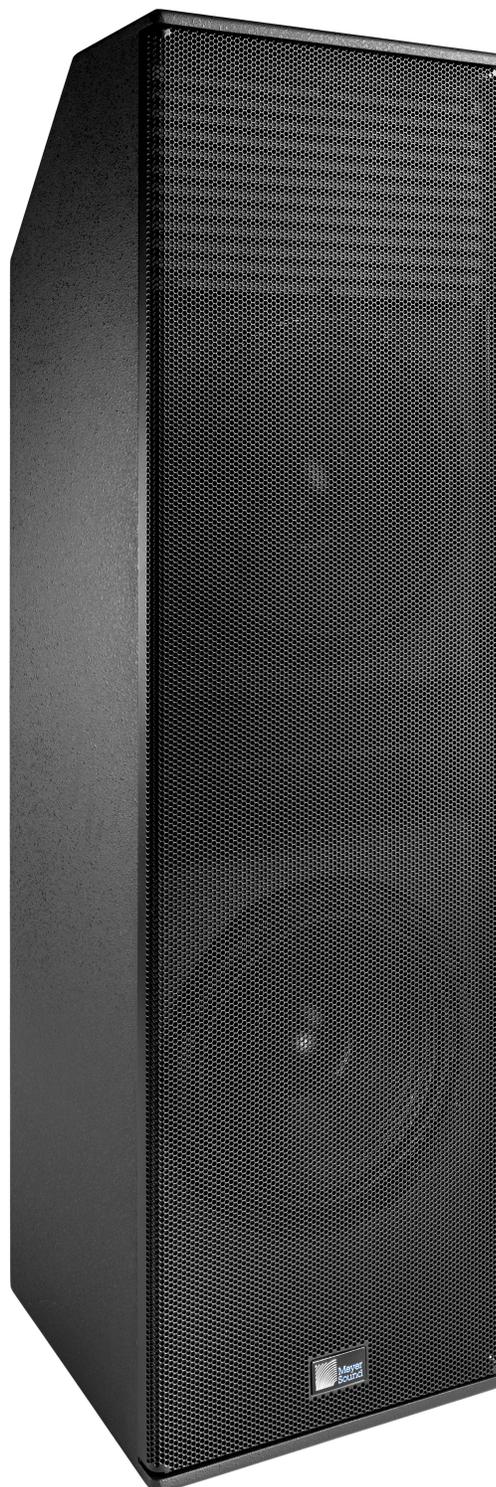

***Keep these important operating instructions.
Check www.meyersound.com for updates.***

© 2019, 2020

Meyer Sound. All rights reserved.

USW-210P Operating Instructions, PN 05.277.005.01 A4

The contents of this manual are furnished for informational purposes only, are subject to change without notice, and should not be construed as a commitment by Meyer Sound Laboratories Inc. Meyer Sound assumes no responsibility or liability for any errors or inaccuracies that may appear in this manual. Except as permitted by applicable copyright law, no part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, recording or otherwise, without prior written permission from Meyer Sound.

The following is a partial list of Meyer Sound trademarks and service marks:


650-P®, 650-R2®, Acheron®, AlignALink, B-Noise, Bluehorn, BroadbandQ®, CAL, Callisto®, Compass®, Compass Go by Meyer Sound, Compass RMS, Composite EQ, Constellation®, CueConsole, CueStation, D-Mitri®, EXP®, Galileo®, GuideALink, Intelligent AC, LCS, LEO®, LEO-M, LEOPARD, LYON, M Series, M1D, M2D, M3D, MAPP, MAPP Online Pro®, MAPP 3D, MAPP XT, Matrix3, MatrixLink, M'elodie®, MICA®, MILO®, MINA, MSL-4®, MultiSense, QuickFly®, QuietCool, REM®, RMS, SIM®, Spacemap®, SpeakerSense, Stella, Thinking Sound®, TM Array, TruPower®, TruShaping®, UltraSeries, U-Shaping®, VariO, VRAS, Wild Tracks.

All third-party trademarks mentioned herein are the property of their respective trademark holders.

IMPORTANT SAFETY INSTRUCTIONS

These symbols indicate important safety or operating features in this booklet and on the frame or chassis:

SYMBOLS USED

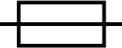				
Dangerous voltages: risk of electric shock	Important operating instructions	Replaceable Fuse	Protective earth ground	Hot surface: do not touch
Gefährliche Spannungen: Stromschlaggefahr	Hinweis auf wichtige Punkte der Betriebsanleitung	Austauschbare Sicherung	Schutzerde	Heiße Oberfläche: nicht berühren
Pour indiquer les risques résultant de tensions dangereuses	Instructions d'utilisation importantes	Fusible remplaçable	Terre de protection	Surface chaude: ne pas toucher
Para indicar voltajes peligrosos	Instrucciones importantes de funcionamiento y/o Mantenimiento	Fusible reemplazable	Toma de tierra de protección	Superficie caliente: no tocar

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with Meyer Sound's installation instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
9. Do not defeat the safety purpose of the grounding-type plug. A grounding type plug has two blades and a third grounding prong. The third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus. The AC mains plug or appliance coupler shall remain readily accessible for operation.
11. Only use attachments/accessories specified by Meyer Sound.
12. Use only with the caster rails or rigging specified by Meyer Sound, or sold with the apparatus. Handles are for carrying only.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. If equipped with an external fuse holder, the replaceable fuse is the only user-serviceable item. When replacing the fuse, only use the same type and the same value.
15. Refer all other servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as when the power-supply cord or plug has been damaged; liquid has been spilled or objects have fallen into the apparatus; rain or moisture has entered the apparatus; the apparatus has been dropped; or when for undetermined reasons the apparatus does not operate normally.

 **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. Do not install the apparatus in wet or humid locations without using weather protection equipment from Meyer Sound.

 **WARNING:** Class I apparatus shall be connected to a mains socket outlet with a protective earthing connection.

 **CAUTION:** Disconnect the mains plug before disconnecting the power cord from the loud-speaker.

English

- To reduce the risk of electric shock, disconnect the apparatus from the AC mains before installing audio cable. Reconnect the power cord only after making all signal connections.
- Connect the apparatus to a two-pole, three-wire grounding mains receptacle. The receptacle must be connected to a fuse or circuit breaker. Connection to any other type of receptacle poses a shock hazard and may violate local electrical codes.
- Do not install the apparatus in wet or humid locations without using weather protection equipment from Meyer Sound.
- Do not allow water or any foreign object to get inside the apparatus. Do not put objects containing liquid on or near the unit.
- To reduce the risk of overheating the apparatus, avoid exposing it to direct sunlight. Do not install the unit near heat-emitting appliances, such as a room heater or stove.
- If equipped with an external fuse holder, the replaceable fuse is the only item that can be serviced by the user. When replacing the fuse, only use the same type and value.
- This apparatus contains potentially hazardous voltages. Do not attempt to disassemble the unit. The only user-serviceable part is the fuse. All other repairs should be performed only by factory-trained service personnel.

Deutsch

- Zur Minimierung der Gefahr eines elektrischen Schlages trennen Sie das Produkt vor dem Anschluss von Audio- und/oder Steuerleitungen vom Stromnetz. Das Netzkabel darf erst nach Herstellung aller Signalverbindungen wieder eingesteckt werden.
- Das Produkt an eine vorschriftsgemäss installierte dreipolige Netzsteckdose (Phase, Neutralleiter, Schutzleiter) anschließen. Die Steckdose muss vorschriftsgemäß mit einer Sicherung oder einem Leitungsschutzschalter abgesichert sein. Das Anschließen des Produkts an eine anders ausgeführte Stromversorgung kann gegen Vorschriften verstossen und zu Stromunfällen führen.
- Das Produkt nicht an einem Ort aufstellen, an dem es direkter Wassereinwirkung oder übermäßig hoher Luftfeuchtigkeit ausgesetzt werden könnte, solange es sich nicht um ein Produkt handelt, dass mit der Meyer Sound Weather Protection Option ausgestattet ist.
- Vermeiden Sie das Eindringen von Wasser oder Fremdkörpern in das Innere des Produkts. Stellen Sie keine Objekte, die Flüssigkeit enthalten, auf oder neben dem Produkt ab.
- Um ein Überhitzen des Produkts zu verhindern, halten Sie das Gerät von direkter Sonneneinstrahlung fern und stellen Sie es nicht in der Nähe von wärmeabstrahlenden Geräten (z.B. Heizgerät oder Herd) auf.

- Bei Ausstattung mit einem externen Sicherungshalter ist die austauschbare Sicherung das einzige Gerät, das vom Benutzer gewartet werden kann. Verwenden Sie beim Austausch der Sicherung nur den gleichen Typ und Wert.
- Dieses Gerät enthält möglicherweise gefährliche Spannungen. Versuchen Sie nicht, das Gerät zu zerlegen. Der einzige vom Benutzer zu wartende Teil ist die Sicherung. Alle anderen Reparaturen dürfen nur von im Werk geschultem Servicepersonal ausgeführt werden.

Français

- Pour éviter tout risque d'électrocution, débranchez l'enceinte de la prise secteur avant de mettre en place le câble audio. Ne rebranchez le cordon secteur qu'après avoir procédé à toutes les connexions de signal audio
- Brancher l'appareil sur une prise secteur à trois fils et deux pôles avec mise à la terre. La prise doit être reliée à un fusible ou à un disjoncteur. Le branchement à tout autre type de prise présente un risque de choc électrique et peut enfreindre les codes locaux de l'électricité.
- N'installez pas l'enceinte dans des endroits humides ou en présence d'eau sans utiliser d'équipements de protection adéquats fournis par Meyer Sound.
- Ne laissez pas d'eau ou d'objet étranger, quel qu'il soit, pénétrer à l'intérieur de l'enceinte. Ne posez pas d'objet contenant du liquide sur ou à proximité de l'enceinte.
- Pour réduire les risques de surchauffe, évitez d'exposer directement l'enceinte aux rayons du soleil. Ne l'installez pas à proximité de sources de chaleur, radiateur ou four par exemple.
- S'il est équipé d'un porte-fusible externe, le fusible remplaçable est le seul élément qui peut être réparé par l'utilisateur. Lors du remplacement du fusible, n'utilisez que le même type et la même valeur.
- Cet appareil contient des tensions potentiellement dangereuses. N'essayez pas de démonter l'appareil. Le fusible est la seule pièce réparable par l'utilisateur. Toutes les autres réparations doivent être effectuées uniquement par du personnel de maintenance formé en usine.

Español

- Para reducir el riesgo de descarga eléctrica, desconecte el aparato de la red eléctrica antes de instalar el cable de audio. Vuelva a conectar el cable de alimentación sólo después de realizar todas las conexiones de señal.
- Conecte el aparato a una toma de corriente de tres hilos y dos polos con conexión a tierra. El receptáculo debe estar conectado a un fusible o disyuntor. La conexión a cualquier otro tipo de receptáculo representa un riesgo de descarga eléctrica y puede violar los códigos eléctricos locales.

- No instale el aparato en lugares húmedos o mojados sin usar el equipo de protección contra intemperie de Meyer Sound.
- No permita que penetre agua u otros objetos extraños en el interior del aparato. No coloque objetos que contengan líquido sobre o cerca de la unidad.
- Para reducir el riesgo de sobrecalentamiento del aparato, evite exponerlo a la luz solar directa. No instale la unidad cerca de aparatos que emitan calor, como un calefactor o una estufa
- Si está equipado con un portafusibles externo, el fusible reemplazable es el único elemento que puede ser reparado por el usuario. Cuando reemplace el fusible, use solamente el mismo tipo y valor.
- Este aparato contiene voltajes potencialmente peligrosos. No intente desmontar la unidad. La única pieza que el usuario puede reparar es el fusible. Todas las demás reparaciones deben ser realizadas únicamente por personal de servicio capacitado de fábrica.

CONTENTS

Important Safety Instructions	iii
Symbols Used	iii
Chapter 1: Introduction	9
How to Use This Manual	9
The USW-210P Loudspeaker	9
Integrated Amplifier and Processing	10
Integrated Rigging Points	10
Chapter 2: Power Requirements	11
AC Power Distribution	11
AC Connectors	12
Wiring AC Power Cables	13
Voltage Requirements	13
Current Requirements	13
Intelligent AC Power Supply	14
Electrical Safety Guidelines	15
Chapter 3: Amplification and Audio Connectors	17
Audio Connectors	17
TruPower Limiting	18
Amplifier Cooling System	18
On/Status LED	19
Chapter 4: Rigging	21
USW-210P Rigging Accessories	21
The MBP-USW-210P Base Plate	22
The MUB-USW-210P U-Bracket	23
Chapter 5: RMS Remote Monitoring System	25
Compass RMS Software	25
RMS Module	25
Neuron ID for RMS Module	26
Resetting the RMS Module	26
Chapter 6: System Design and Integration Tools	27
MAPP System Design Tool	27
Galileo Galaxy Network Platform	28
Appendix A: Meyer Sound Weather Protection	29
Weather Protection Components	30
Installation Practices	30
IP Ratings	31
Appendix B: Rain Hood	33
Rigid Rain Hood	33

Appendix C: USW-210P Specifications	35
USW-210P Acoustical, Electrical, and Physical Specifications	35
USW-210P Loudspeaker Dimensions	37
USW-210P Loudspeaker with Rain Hood Dimensions	38
MUB-USW-210P Dimensions	39
USW-210P with MUB-USW-210P Dimensions	40
MBP-USW-210P Dimensions	41

CHAPTER 1: INTRODUCTION

HOW TO USE THIS MANUAL

Please read these instructions in their entirety before configuring a Meyer Sound loudspeaker system. In particular, pay close attention to material related to safety issues.

As you read these instructions, you will encounter the following icons for notes, tips, and cautions:



NOTE: A note identifies an important or useful piece of information relating to the topic under discussion.



TIP: A tip offers a helpful tip relevant to the topic at hand.



CAUTION: A caution gives notice that an action may have serious consequences and could cause harm to equipment or personnel, or could cause delays or other problems.

Information and specifications are subject to change. Updates and supplementary information are available at meyersound.com.

Meyer Sound Technical Support is available at:

- **Tel:** +1 510 486.1166 (Monday through Friday 9:00 am to 5:00 pm PST)
- **Tel:** +1 510 486.0657 (after hours support)
- **Web:** meyersound.com/support

THE USW-210P LOUDSPEAKER

The USW-210P compact narrow subwoofer provides robust, extended low frequency response for installed sound applications that require convincing bass impact from a slender, low profile loudspeaker. Its dual-driver configuration permits a narrow form factor that fits into restricted architectural spaces to produce output levels equal to or exceeding systems with single 12-inch (or larger) drivers. Its slanted connector panel enables flush-mounting the cabinet against wall surfaces, reducing required installation depth to 12 inches (30.5 cm), including connectors.

The USW-210P subwoofer is ideal for installations requiring high performance and versatility along with an appealing, discreet aesthetic appearance. The USW-210P integrates easily with other Meyer Sound loudspeaker systems, such as CAL™ and ULTRA Series loudspeakers.

The USW-210P has an operating frequency range of 30–140 Hz with a linear peak SPL of 126 dB (measured in half-space at 4 m and referred to 1 m using M-noise). The long skinny bass reflex cabinet employs the same port design as Meyer Sound's flagship 1100-LFC low frequency control element for high efficiency and low port distortion.



Figure 1: USW-210P Slanted Connector Panel

INTEGRATED AMPLIFIER AND PROCESSING

A self-powered loudspeaker, the USW-210P cabinet houses a two-channel Class D power amplifier. The audio signal is processed with correction filters for flat frequency and phase responses, and by driver protection circuitry. The amplifier/processing package incorporates Meyer Sound's Intelligent AC which auto-selects the correct operating voltage, suppresses high voltage transients, filters EMI and provides soft-start power-up. The USW-210P cabinet provides audio XLR and powerCON 20 input and looping output connectors.

An optional RMS™ remote monitoring system module provides comprehensive monitoring of loudspeaker parameters from a host computer running Compass Control Software.

The USW-210P loudspeaker's on-board amplifier is convection cooled.

 **NOTE:** Complete acoustical, electrical and physical specifications are covered in Appendix C on page 35.

INTEGRATED RIGGING POINTS

Meyer Sound constructs the USW-210P cabinet from premium multi-ply birch coated with a slightly textured black finish and includes a stamped-steel grille to protect the drivers. Weather protection and custom color finishes for specific cosmetic requirements are available options.

With its versatile shape, the USW-210P can be placed on the ground in a horizontal or vertical position to accommodate installation requirements.

The USW-210P comes standard with M8 mounting points at the top and bottom for use with the optional U-bracket that facilitates wall or ceiling mounting.

In addition, an optional aluminum base plate is available to enhance stability when placing the USW-210P free-standing vertically. This base plate can attach to either end of the loudspeaker, so that the connectors can be oriented at either the top or the bottom when it is free-standing.



Figure 2: USW-210P with MUB-USW-210P (ceiling mount)



Figure 3: USW-210P in MBP-USW-210P Base Plate

CHAPTER 2: POWER REQUIREMENTS

The USW-210P subwoofer combines advanced loudspeaker technology with equally advanced power capabilities. Understanding power distribution, voltage and current requirements, and electrical safety guidelines is critical for the safe operation of the device.

AC POWER DISTRIBUTION

All components in an audio system (self-powered loudspeakers, mixing consoles, and processors) must be properly connected to an AC power distribution system, ensuring that AC line polarity is preserved and that all grounding points are connected to a single node or common point using the same cable gauge (or larger) as the neutral and line cables.

CAUTION: Make sure the voltage received by the USW-210P loudspeaker remains within its 90–264 V AC operating range. In addition, the ground line must always be used for safety reasons and the line-to-ground voltage should never exceed 250 V AC (typically 120 V AC from line to ground).

CAUTION: Before applying AC power to any Meyer Sound self-powered loudspeaker, make sure that the voltage potential difference between the neutral and earth-ground lines is less than 5 V AC when using single-phase AC wiring.

NOTE: Improper grounding of connections between loudspeakers and the rest of the audio system may produce noise or hum, or cause serious damage to the input and output stages of the system's electronic components.

120 V AC, 3-Phase Wye System (Single Line)

Line-Neutral-Earth/Ground

Figure 4 illustrates a basic 120 V AC, 3-phase Wye distribution system with the loudspeaker load distributed across all three phases, with each loudspeaker connected

to a single line and common neutral and earth/ground lines. This system delivers 120 V AC to each loudspeaker.

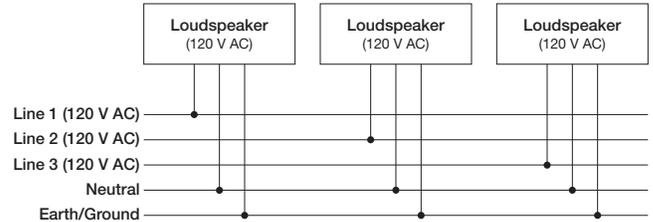


Figure 4: 120 V AC, 3-Phase Wye System (Single Line to Loudspeakers)

120 V AC, 3-Phase Wye System (Two Lines)

Line-Line-Earth/Ground

Figure 5 illustrates a 120 V AC, 3-phase Wye distribution system with each loudspeaker connected to two lines and a common earth/ground line. This configuration is possible because USW-210P tolerates elevated voltages from the ground line and does not require a neutral line. This system delivers 208 V AC to each loudspeaker.

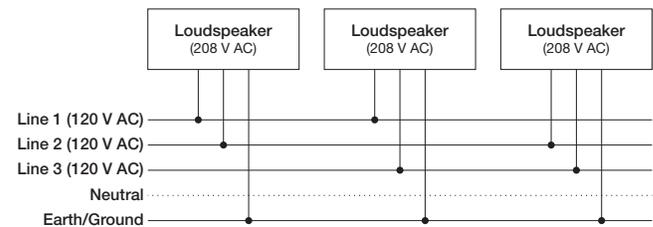


Figure 5: 120 V AC, 3-Phase Wye System (Two Lines to Loudspeakers)

TIP: The 120 V AC, 3-phase Wye system with two lines is recommended because it allows loudspeakers to draw less current than with single-line systems, thereby reducing voltage drop due to cable resistance. It also excludes the potential of varying ground to neutral voltages producing an audible hum.

230 V AC, 3-Phase Wye System (Single Line)

Line-Neutral-Earth/Ground

Figure 6 illustrates a basic 230 V AC, 3-phase Wye distribution system with the loudspeaker load distributed across all three phases, with each loudspeaker connected to a single line and common neutral and earth/ground lines. This system delivers 230 V AC to each loudspeaker.

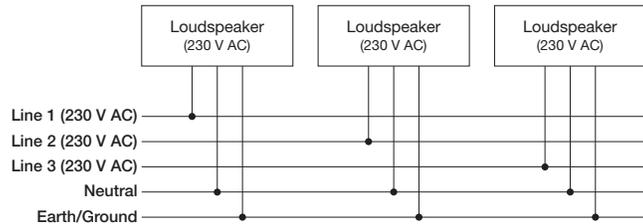


Figure 6: 230 V AC, 3-Phase Wye System (Single Line to Loudspeakers)

CAUTION: For 230 V AC, 3-phase Wye systems, never connect two lines to the AC input of USW-210P, as the resulting voltage would exceed the upper voltage limit (275 V AC) and will damage the loudspeaker.

AC CONNECTORS

The USW-210P user panel includes two powerCON 20 connectors (Figure 7), one for AC Input (blue) and one for AC Loop Output (gray).



Figure 7: AC Input (Left) and AC Loop Output (Right) Connectors

AC Input (Blue)

The blue AC Input connector supplies power to USW-210P. The 3-conductor powerCON 20 is rated at 20 A and uses a locking connector that prevents accidental disconnections. A 10-foot AC power cable, rated at 15 A, is included with each loudspeaker. If the included AC power cable is replaced, make sure to use a cable with the appropriate power plug (on the other end) for the region where the unit will be operated. USW-210P requires a

grounded outlet. To operate safely and effectively, it is extremely important that the entire system be properly grounded.

The AC Input connector also supplies power to any additional loudspeakers connected to the loudspeaker's gray Loop Output connector.

CAUTION: When looping AC power for loudspeakers, do not exceed the current capability of the AC Input connector (20 A) or the included AC power cable (15 A). Consider the total current draw for all loudspeakers on the circuit, including the first loudspeaker (Table 1).

AC Loop Output (Gray)

The gray AC Loop Output connector allows multiple USW-210P to be looped and powered from a single power source. The 3-conductor powerCON 20 is rated at 20 A and uses a locking connector that prevents accidental disconnections. For applications that require multiple USW-210P, connect the AC Loop Output of the first loudspeaker to the AC Input of the second loudspeaker and so forth.

The maximum number of loudspeakers that can be looped from the AC Loop Output connector is determined by the voltage of the power source, the current draw of the looped loudspeakers, the circuit breaker rating, and the rating of the AC power cable connected to the first USW-210P loudspeaker (Table 1).

Table 1: Maximum USW-210Ps that Can Be Looped with AC Power

Circuit Breaker/ Connector Rating	115 V AC	230 V AC	100 V AC
15 A	9 looped (10 total)	18 looped (19 total)	8 looped (9 total)
20 A	13 looped (14 total)	24 looped (25 total)	11 looped (12 total)

NOTE: Current draw for USW-210P is dynamic and fluctuates as operating levels change. The indicated number of loudspeakers that can be looped assumes that operating levels are normal and not such that loudspeakers are constantly limiting.

USW-210P ships with a gray powerCON 20 cable mount connector, rated at 20 A, for assembling AC looping cables. Assembled 1-meter AC looping cables (PN 28.115.032.03) are also available from Meyer Sound.

WIRING AC POWER CABLES

USW-210P ships with a gray powerCON 20 cable mount connector, rated at 20 A, for assembling AC looping cables (Figure 8). The pins on the powerCON 20 cable mount connector are labeled as follows:

- L (Line)
- N (Neutral)
- PE (Protective Earth or Ground)

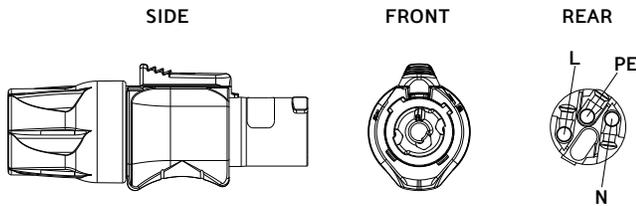


Figure 8: powerCON20 Cable Mount Connector

How AC power cables are wired is determined by the type of AC power distribution system used (see “AC Power Distribution” on page 11). When wiring AC power cables for single-line systems, use one of the wiring schemes shown in Figure 9 and described in Table 2:

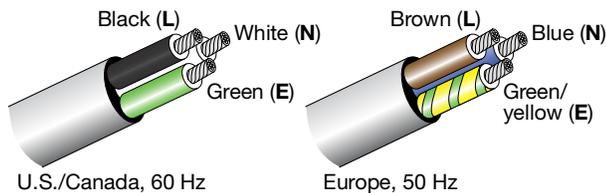


Figure 9: AC Wiring Scheme

Table 2: AC Wiring Scheme

Wire Color		Attach to the Following Terminal
U.S. / Canada 60 Hz	European 50 Hz	
Black	Brown	Hot or live (L)
White	Blue	Neutral (N)
Green	Green and Yellow	Protective earth / ground (E or PE)

CAUTION: When wiring AC power cables and distribution systems, it is important to preserve AC line polarity and connect the earth ground at both ends of the cable. USW-210P requires a grounded connection. Always use a grounded outlet and plug. It is extremely important that the system be properly grounded to operate safely and properly. Do not ground-lift the AC cable.

VOLTAGE REQUIREMENTS

USW-210P operates as intended when receiving AC voltage within the following range:

- 90–264 V AC, 50–60 Hz

If the voltage drops below 90 V, the loudspeaker uses stored power to continue operating temporarily; the loudspeaker powers off if the voltage does not return to its operating range.

If the voltage rises above 275 V, the power supply could become damaged.

CAUTION: The power source for USW-210P should always operate within the required operating range, at least a few volts from the upper and lower limits. This approach ensures that AC voltage variations from the service entry—or peak voltage drops due to cable runs—will not cause the loudspeaker’s amplifier to cycle on and off or cause damage to the power supply.

CURRENT REQUIREMENTS

Current draw for loudspeakers is dynamic and fluctuates as operating levels change. Because different cables and circuit breakers heat up at varying rates, it is important to understand the following types of current ratings and how they affect circuit breaker and cable specifications.

- **Idle Current** — The maximum rms current during idle periods.
- **Maximum Long-Term Continuous Current** — The maximum rms current during a period of at least 10 seconds. The maximum long-term continuous current is used to calculate temperature increases for cables and to ensure that the size and gauge of each cable conforms to electrical code standards. This current rating is also used to select appropriately rated, slow-reacting thermal breakers, which are recommended for loudspeaker power distribution. In addition, the maximum long-term continuous current can be used to calculate the AC looping capability for USW-210P loudspeakers.
- **Burst Current** — The maximum rms current during a period of around 1 second. The burst current is used as a rating for magnetic breakers. It is also used for calculating the peak voltage drop in long AC cable runs according to the following formula:

$$V_{pk} (\text{drop}) = I_{pk} \times R (\text{cable total})$$

- **Maximum Instantaneous Peak Current** — A rating for fast-reacting magnetic breakers.

Use the information in Table 3 to select the appropriate cable gauge and circuit breaker ratings for the system’s operating voltage.

Table 3: USW-210P Current Draw

Current Draw	115 V AC	230 V AC	100 V AC
Idle	0.27 A rms	0.25 A rms	0.29 A rms
Maximum Long-Term Continuous	1.4 A rms	0.7 A rms	1.6 A rms
Burst	4.5 A rms	2.1 A rms	4.8 A rms
Maximum Instantaneous Peak	9.7 A rms	4.6 A rms	10.8 A rms

The minimum electrical service amperage required by a loudspeaker system is the sum of the maximum long-term continuous current for all loudspeakers. An additional 30 percent above the combined Maximum Long-Term Continuous amperages is recommended to prevent peak voltage drops at the service entry.



NOTE: For best performance, the AC cable voltage drop should not exceed 10 V (10 percent at 115 V and 5 percent at 230 V). This approach ensures that the AC voltage variations from the service entry — or peak voltage drops due to longer cable runs — do not cause the amplifier to cycle on and off.

INTELLIGENT AC POWER SUPPLY

USW-210P’s Intelligent AC™ power supply automatically selects the correct operating voltage (allowing the loudspeaker to be used internationally without manually setting voltage switches), eliminates high inrush currents with soft-start power up, suppresses high-voltage transients up to several kilovolts, filters common mode and differential mode radio frequencies (EMI), and sustains operation temporarily during low-voltage periods.

Powering on USW-210P

When powering on USW-210P, the following startup events take place over several seconds.

1. Audio output is muted.
2. Voltage is detected and the power supply mode is automatically adjusted as necessary.
3. The power supply ramps up.
4. On the user panel, the On/Status LED flashes multiple colors successively.
5. The On/Status LED turns solid green, indicating the loudspeaker is unmuted and ready to output audio.




CAUTION: If the On/Status LED does not turn solid green, or the USW-210P does not output audio after 10 seconds, remove AC power immediately and verify that the voltage is within the required range. If the problem persists, contact Meyer Sound Technical Support.


ELECTRICAL SAFETY GUIDELINES

Make sure to observe the following important electrical and safety guidelines.

- The powerCON 20 connector should not be engaged or disengaged when under load or energized. Either de-energize or disconnect the other end of the cable.
- USW-210P requires a grounded outlet. Always use a grounded outlet and plug.

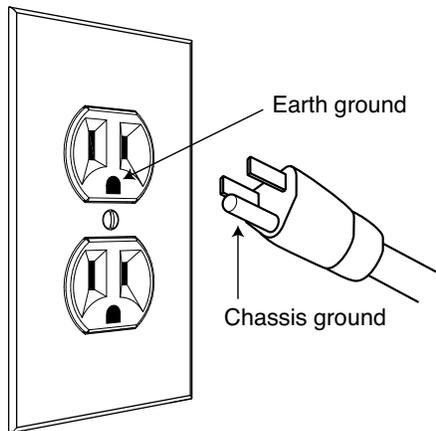

- Do not use a ground-lifting adapter or cut the AC cable ground pin.

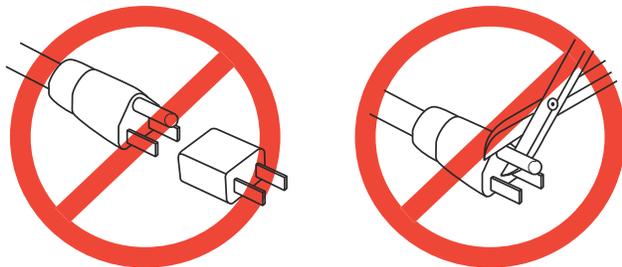

- Do not exceed the current capability of the 20 A AC Input connector for the loudspeaker. When looping loudspeakers, consider the total current draw for all loudspeakers on the circuit, including the first loudspeaker.
- Make sure the AC power cable for the loudspeaker has the appropriate power plug (on the other end) for the area in which you will operate the loudspeaker. In addition, the AC power cable must be rated for the total current draw of all loudspeakers looped from the power source.
- Do not operate the unit if the power cable is frayed or broken.
- Keep all liquids away from USW-210P loudspeakers to avoid hazards from electrical shock.

CHAPTER 3: AMPLIFICATION AND AUDIO CONNECTORS

The USW-210P drivers are powered by a proprietary 2-channel, open-loop, class D amplifier. The audio signal is processed with correction filters for flat phase and frequency responses, and by driver protection circuitry. Each channel has peak and rms limiters that prevent driver over-excursion and regulate voice coil temperatures.

The USW-210P user panel (Figure 10) includes Input and Loop output connectors for audio, Limit and On/Status LEDs, and RMS connectors and controls (see Chapter 5, “RMS Remote Monitoring System”).

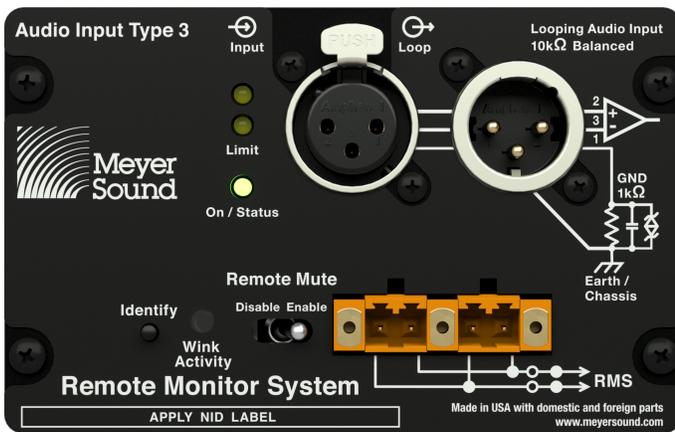


Figure 10: USW-210P User Panel (Shown with Optional RMS Module)

AUDIO CONNECTORS

USW-210P is available with XLR 3-pin (Figure 11) connectors for audio Input and audio Loop output.



Figure 11: XLR 3-Pin Audio Connectors, Input and Loop Output

Audio Input (XLR 3-Pin Female)

The XLR 3-pin female Input connector accepts balanced audio signals with an input impedance of 10 k Ω . The connector uses the following wiring scheme:

- **Pin 1** – 1 k Ω to chassis and earth ground (ESD clamped)
- **Pin 2** – Signal (+)
- **Pin 3** – Signal (-)

Pins 2 and 3 carry the input as a differential signal. Pin 1 is connected to earth through a 1 k Ω , 1000 pF, 15 V clamped network. This circuitry provides virtual ground lift for audio frequencies while allowing unwanted signals to bleed to ground. Make sure to use balanced XLR audio cables with pins 1–3 connected on both ends. Telescopic grounding is not recommended and shorting an input connector pin to the case may cause a ground loop, resulting in hum.

 **TIP:** If the loudspeaker produces unwanted noise or hiss, disconnect its input cable. If the noise stops, there is most likely nothing wrong with the loudspeaker. To locate the source of the noise, check the source audio, AC power, and electrical ground.

Audio Loop Output (XLR 3-Pin Male)

The XLR 3-pin male Loop output connector allows multiple loudspeakers to be looped from a single audio source. The Loop output connector uses the same wiring scheme as the Input connector. For applications that require multiple USW-210P, connect the Loop output of the first loudspeaker to the Input of the second loudspeaker and so forth.

 **NOTE:** The Loop output connector is wired in parallel to the Input connector and transmits the unbuffered source signal even when the loudspeaker is powered off.

Calculating Load Impedance for Looped Audio Signals

To avoid distortion when looping multiple loudspeakers, make sure the source device can drive the total load impedance of the looped loudspeakers. In addition, the source device must be capable of delivering approximately

20 dBV (10 V rms into 600 Ω) to yield the maximum SPL over the operating bandwidth of the loudspeakers.

To calculate the load impedance for the looped loudspeakers, divide 10 k Ω (the input impedance for a single loudspeaker) by the number of looped loudspeakers. For example, the load impedance for 10 USW-210P is 1000 Ω (10 k Ω / 10). To drive this number of looped loudspeakers, the source device should have an output impedance of 100 Ω or less. This same rule applies when looping USW-210P with other Meyer Sound self-powered loudspeakers.

 **NOTE:** Most source devices are capable of driving loads no less than 10 times their output impedance.

 **TIP:** Audio outputs from Meyer Sound's loudspeaker GALAXY Network Platform have an output impedance of 50 ohms. Each output can drive up to 20 Meyer Sound (10 k Ω) loudspeakers without distortion.

 **CAUTION:** Make sure that all cabling for looped loudspeakers is wired correctly (Pin 1 to Pin 1, Pin 2 to Pin 2, and so forth) to prevent the polarity from being reversed. If one or more loudspeakers in a system have reversed polarity, frequency response and coverage will be significantly degraded.

TRUPOWER LIMITING

The USW-210P employs Meyer Sound's advanced TruPower[®] limiting. Conventional limiters assume a constant driver impedance and set the limiting threshold by measuring voltage alone. This method is inaccurate, because driver impedances change as frequency content in the source material changes, and as thermal values for the loudspeaker's voice coil and magnet vary. Consequently, conventional limiters often begin limiting prematurely, which reduces system headroom and dynamic range.

In contrast, TruPower limiting anticipates varying driver impedances by measuring both current and voltage to compute the actual power dissipation in the voice coil. This approach improves performance, both before and during limiting, by allowing the driver to produce the maximum SPL across its entire frequency range, while also retaining signal peaks. TruPower limiting also eliminates power compression at high levels over lengthy periods, which helps regulate voice coil temperatures, thereby extending the life of the driver.

LF Limit LEDs

The low-frequency drivers for USW-210P are powered by separate amplifier channels, each with their own limiter. Limiting activity is indicated with two Limit LEDs on the user panel.



Figure 12: USW-210P Limit LEDs

When engaged, the limiters not only protect the drivers but also prevent signal peaks from causing excessive distortion in the amplifier channels, thereby preserving headroom and maintaining smooth frequency response at high levels. When levels return to normal, below the limiter thresholds, limiting ceases.

USW-210P performs within its acoustical specifications at normal temperatures when the Limit LEDs are unlit, or when the LEDs are lit for 2 seconds or less and then turn off for at least 1 second. If the LEDs remain lit for longer than 3 seconds, the loudspeaker enters hard limiting where:

- Increases to the input level have no effect
- Distortion increases due to clipping
- Drivers are subjected to excessive heat and excursion, thereby compromising their lifespan

 **CAUTION:** The Limit LEDs indicate when a safe, optimum level is exceeded. If an USW-210P loudspeaker system begins to limit before reaching the desired SPL, consider adding more units to the system.

AMPLIFIER COOLING SYSTEM

The USW-210P loudspeaker is convection cooled. The amplifier's heat sink provides natural convection cooling from the air flowing near its fins.

 **CAUTION:** The USW-210P heat sink can reach very high temperatures during extreme operation. Wait 15 minutes for the unit to cool before touching.

ON/STATUS LED

During normal operation, when USW-210P is powered on, the On/Status LED is solid green. If the loudspeaker encounters a hardware fault, or the unit begins to overheat, the LED flashes red. In some instances, the loudspeaker will continue to output audio while the LED flashes red, though with a reduction in the limiter threshold and acoustic output to protect the loudspeaker.

If a loudspeaker is overheating (for RMS-equipped loudspeakers, you can verify this situation in Compass RMS), a reduction in SPL may be necessary. If after a reduction in SPL and an appropriate cooling period the On/Status LED continues to flash red (does not return to solid green), contact Meyer Sound Technical Support.

If the On/Status LED flashes red and the loudspeaker does not output audio, contact Meyer Sound Technical Support immediately.



CAUTION: If an USW-210P loudspeaker system consistently overheats before reaching the desired SPL, consider adding more units to the system.



NOTE: During startup, the On/Status LED flashes multiple colors successively. For more information about the power on sequence, see “Intelligent AC Power Supply” on page 14.



TIP: When an USW-210P is connected to an RMS network, the Compass RMS software provides additional feedback about the loudspeaker’s hardware status and operating temperature. For more information, see Chapter 5, “RMS Remote Monitoring System.”

CHAPTER 4: RIGGING

With its versatile shape, the USW-210P can be placed on the ground in a horizontal or vertical position to accommodate installation requirements. The USW-210P comes standard with M8 mounting points at the top and bottom for use with the optional U-bracket that enables wall or ceiling mounting.

In addition, an optional aluminum base plate is available to enhance stability when placing the USW-210P free-standing vertically (connectors at top or bottom). Optional rigging details are provided in Table 4.

Important Safety Considerations!

When installing Meyer Sound loudspeakers, the following precautions should always be observed:

- All Meyer Sound products must be used in accordance with local, state, federal, and industry regulations. It is the owner's and user's responsibility to evaluate the

reliability of any rigging method for their application. Rigging should only be carried out by experienced professionals.

- Use mounting and rigging hardware that has been rated to meet or exceed the weight being hung.
- Make sure to attach mounting hardware to the building's structural components (studs or joists), and not just to the wall surface. Verify that the building's structure and the anchors used for the installation will safely support the total weight of the mounted loudspeakers.
- Use mounting hardware appropriate for the surface where the loudspeaker will be installed.
- Make sure bolts and eye bolts are tightened securely. Meyer Sound recommends using Loctite® on eye bolt threads and safety cables.
- Inspect mounting and rigging hardware regularly. Immediately replace any worn or damaged components.

Table 4: USW-210P Rigging Kit Options

Model	Features
MBP-USW-210P Base Plate (PN 40.010.970.01)	Aluminum base plate enhances stability when placing the USW-210P free-standing vertically (it connects to top or bottom). The kit includes an M8 screw to attach the base plate to the loudspeaker.
MUB-USW-210P U-Bracket (PN 40.277.969.01)	The MUB-USW-210P U-Bracket allows a single USW-210P loudspeaker to be mounted to a wall (in either vertical or horizontal orientations), to the ceiling or onto the floor. The kit includes two M8 screws to attach the MUB-USW-210P to the loudspeaker.

THE MBP-USW-210P BASE PLATE

The MUB-USW-210P Base Plate (PN 40.010.970.01) enhances stability when placing the USW-210P free-standing vertically (connects to top or bottom). This kit includes the aluminum base plate and an M8 screw to attach the base plate to the loudspeaker. The base plate may be mounted on either end of the speaker to provide flexibility in accessing the user panel. For specifications, see “MBP-USW-210P Dimensions” on page 41.

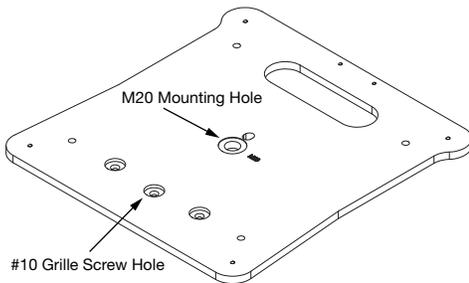


Figure 13: MBP-USW-210P Base Plate

NOTE: The base plate has an M20 thread and can be used as a base plate with a short M20 pole for small speakers, such as Meyer Sound’s MM-4XP or UP-4slim loudspeakers.

The base plate attaches to the subwoofer using the M8 center bolt as the main attachment point. One of the grille frame screws is also used to increase stability and to avoid rotation of the loudspeaker on the plate.

To attach the plate, first remove the center grille screw. Then insert the M8 bolt through the base plate and reinsert the grille screw (Figure 14).

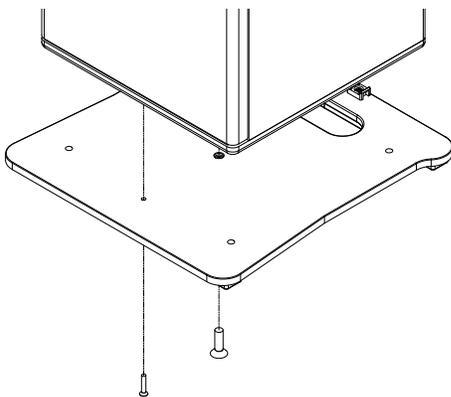


Figure 14: Base Plate Attachment to Loudspeaker, Exploded View

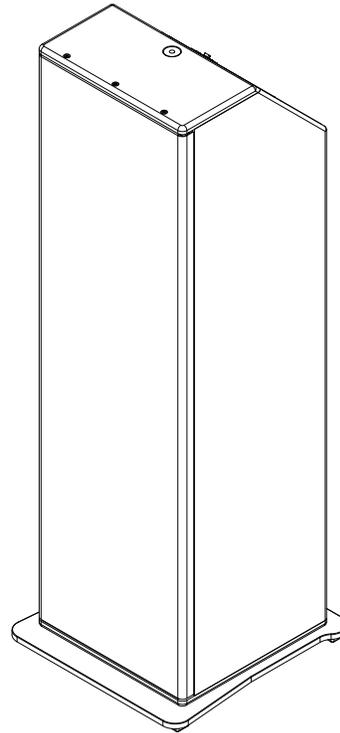


Figure 15: MBP-USW-210P Base Plate, User Panel Oriented on Top

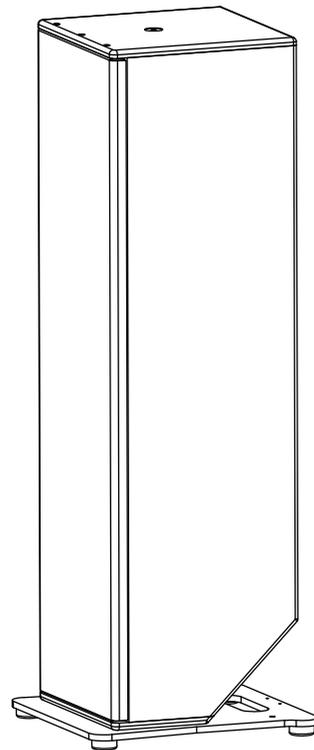


Figure 16: MBP-USW-210P Base Plate, User Panel oriented on Bottom

THE MUB-USW-210P U-BRACKET

The MUB-USW-210P U-Bracket (Figure 17) (40.277.969.01) allows a single USW-210P loudspeaker to be mounted to a wall in either vertical or horizontal orientations (Figure 18 and Figure 19), to the ceiling (Figure 20) or onto the floor. The MUB-USW-210P has three positions for attachment to provide flexibility in mounting. The kit includes two M8 screws for attaching the MUB-USW-210P to the loudspeaker. For specifications, reference “MUB-USW-210P Dimensions” on page 39 and “USW-210P with MUB-USW-210P Dimensions” on page 40.

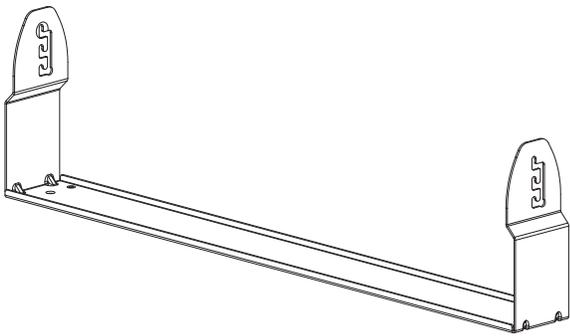


Figure 17: MUB-USW-210P U-Bracket

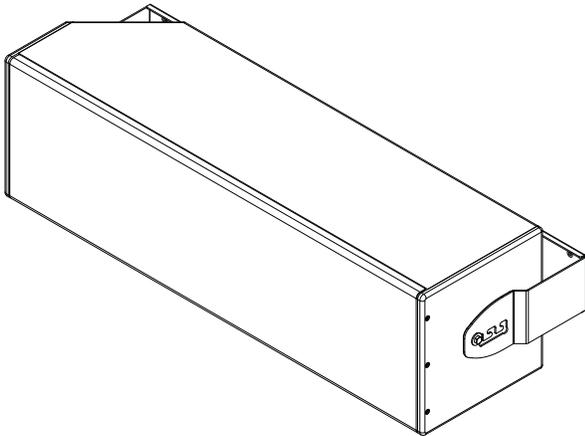


Figure 18: MUB-USW-210P Wall Mount, Horizontal

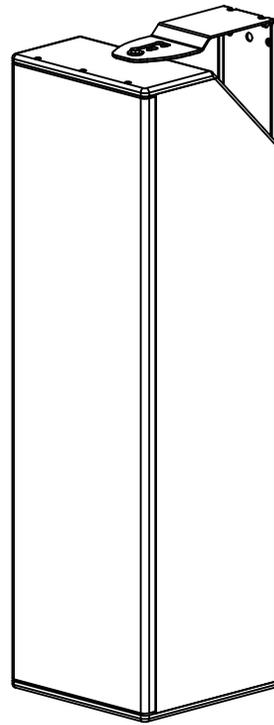


Figure 19: MUB-USW-210P Wall Mount, Vertical

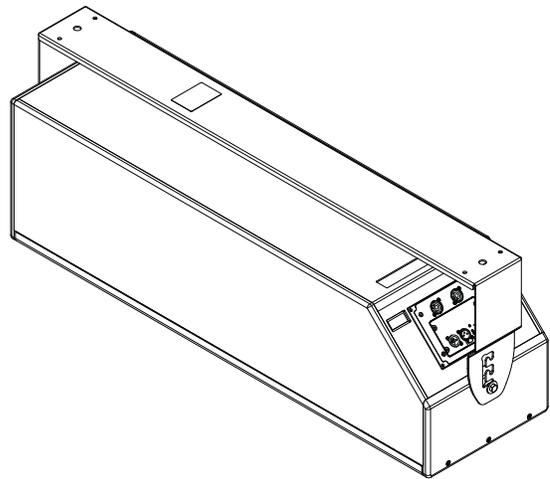


Figure 20: MUB-USW-210P Ceiling Mount

CHAPTER 5: RMS REMOTE MONITORING SYSTEM

The USW-210P loudspeaker optionally includes an RMS remote monitoring system module, allowing it to be connected to an RMS network. RMS reports, in real time, the status and power usage of multiple Meyer Sound loudspeakers from a Mac or Windows-based computer. The RMsServer communicates with Meyer Sound loudspeakers equipped with RMS modules. RMsServer is a compact, Ethernet-based hardware unit with two FT-10 RMS data ports. RMsServer stores system configurations internally, eliminating most manual data entry. Systems can be monitored from a computer at front-of-house or backstage, or from a laptop anywhere within the venue over WiFi.

 **NOTE:** For the latest RMS system requirements, visit meyersound.com.

 **NOTE:** RMS does not control AC power.

COMPASS RMS SOFTWARE

Compass RMS™ software provides extensive system status and performance data for each loudspeaker, including amplifier voltage, limiting activity, power output, fan and driver status, as well as mute and solo capability. Loudspeakers are added to the RMS network and assigned a node name during a one-time discovery procedure. Once loudspeakers are identified on the RMS network, they appear in Compass RMS as icons that can be customized to suit your needs (Figure 21).



Figure 21: Compass RMS Window

Individual loudspeakers can be physically identified with the Wink option in RMS, which lights the Wink LED on the RMS module of that particular loudspeaker. Conversely, a

loudspeaker can be identified in Compass RMS by pressing the Identify button on the loudspeaker's RMS module.

Loudspeaker icons can be arranged in Compass RMS and saved as pages to represent how the loudspeakers have been deployed in the system. Multiple pages can be saved and recalled for specific performances and venues.

RMS MODULE

The USW-210P RMS user panel (Figure 22) includes an Identify button, Remote Mute switch, Wink/Activity LED, and two Network connectors.

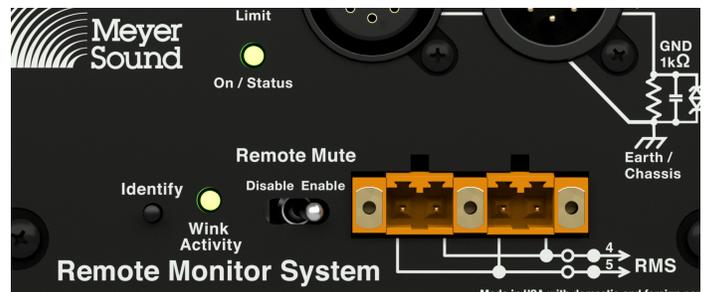


Figure 22: USW-210PRMS Module

 **NOTE:** The Identify button and Wink/Activity LED on the RMS user panel are used exclusively by RMS and have no effect on the acoustical or electrical activity of the loudspeaker.

Identify Button

The Identify button serves the following functions:

- If the loudspeaker has not yet been discovered on the RMS network (Wink/Activity LED not lit), press the Identify button to discover it.
- To remove the loudspeaker from the RMS network, press and hold the Identify button during startup (see "Resetting the RMS Module" on page 26).
- To *wink* a discovered loudspeaker, press the Identify button. The Wink LED on the loudspeaker icon in Compass RMS lights up and the Wink/Activity LED on the loudspeaker's RMS user panel turns solid green. Press the Identify button again to unwink the loudspeaker.



TIP: The loudspeaker can also be winked by clicking the Wink button on the loudspeaker icon in Compass RMS.

Wink/Activity LED (Green)

The green Wink/Activity LED indicates the status of the loudspeaker:

- During startup, the LED flashes green 10 times.
- If the loudspeaker has not yet been discovered on the RMS network, the LED is not lit after startup.
- If the loudspeaker has been successfully discovered on the RMS network, the LED flashes green continuously and flashes more rapidly with increased data activity.
- When the loudspeaker is winked, either by clicking the Wink button in Compass RMS or by pressing the Identify button on the RMS user panel, the LED is solid green. The LED remains solid green until the loudspeaker is unwinked.



TIP: The Wink function is useful for identifying the physical loudspeaker corresponding to a loudspeaker icon in Compass RMS.

Remote Mute Switch

The recessed Remote Mute switch on the USW-210P RMS module (Figure 23) determines whether Compass RMS can control muting and soloing of the loudspeaker. The USW-210P ships from the factory with the switch enabled.

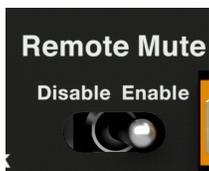


Figure 23: Remote Mute Switch

- **Disable:** When the Remote Mute switch is set to Disable (to the left), the loudspeaker cannot be muted or soloed from Compass RMS.
- **Enable:** When the Remote Mute switch is set to Enable (to the right), the loudspeaker can be muted and soloed from Compass RMS.



NOTE: Compass RMS has a preference that can be set to disable Mute and Solo functions, eliminating any possibility of accidentally muting loudspeakers.

RMS Network Connectors

The Weidmuller 2-conductor, locking connectors transfer data to and from the RMS network. Two connectors are provided to allow for easy connection of multiple (daisy-chained) loudspeakers on the network. Included with each RMS-equipped loudspeaker are RMS cable connectors and mounting blocks for constructing RMS cables. The mounting blocks allow the Weidmuller connectors to be securely attached to the RMS module with screws.

NEURON ID FOR RMS MODULE

Each RMS module has a unique 12-character Neuron ID (NID) that identifies the loudspeaker on the network. The NID is automatically detected by RMServer but can also be entered manually, if necessary, when configuring RMS systems in Compass RMS without loudspeakers present. The NID label is located on the RMS user panel near the orange Network connectors.

RESETTING THE RMS MODULE

You can use the Identify button to reset the USW-210P RMS module when powering on the loudspeaker. This action will cause the module to be removed from the RMS network.

To reset the RMS module:

1. Power down the loudspeaker.
2. Press and hold the Identify button.
3. While continuing to hold down the Identify button, power on the loudspeaker.
4. After the Wink/Status LED flashes on and off, release the Identify button. The RMS module is reset and the loudspeaker is removed from the RMS network.

CHAPTER 6: SYSTEM DESIGN AND INTEGRATION TOOLS

This chapter introduces MAPP, Meyer Sound's patented system design tool and the Galileo GALAXY Network Platform.

MAPP SYSTEM DESIGN TOOL

The MAPP System Design Tool (Figure 24) is a powerful, cross-platform application for accurately predicting the coverage pattern, frequency response, phase response, impulse response, and SPL capability of individual or arrayed Meyer Sound loudspeakers.

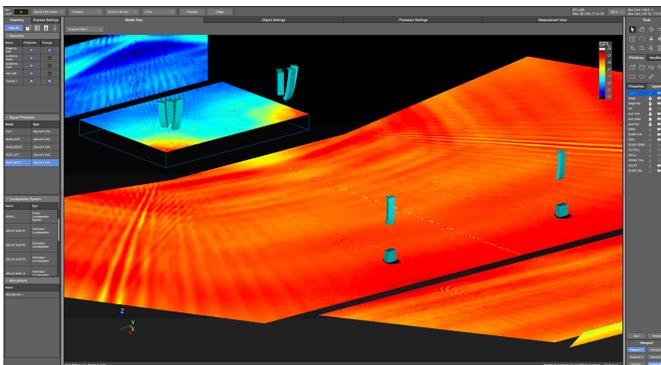


Figure 24: MAPP System Design Tool

Whether planning for fixed installations or for tours with multiple venues, use MAPP to accurately predict the appropriate loudspeaker deployment for each job, complete with coverage data, system delay and equalization settings, rigging information, and detailed design illustrations. MAPP's accurate, high-resolution predictions ensure that systems will perform as intended, thereby eliminating unexpected coverage problems and minimizing onsite adjustments.

The key to the accuracy of MAPP's predictions is Meyer Sound's exhaustive database of loudspeaker measurements. Performance predictions for each loudspeaker are based on 3-dimensional, 65,000+ 1/48th-octave-band measurements taken in the Meyer Sound anechoic chamber. The extraordinary consistency between Meyer Sound loudspeakers guarantees that predictions from MAPP will closely match their actual performance.

MAPP software allows for configuration of Meyer Sound loudspeaker systems and definition of the environment in which they operate, including air temperature, pressure, humidity, and the location of prediction surfaces. Importing both CAD (.DXF) and Sketchup (.SKP) files containing detailed venue information to act as an anchor model to the prediction surfaces and a visual aid to facilitate prediction data interpretation is also possible.



TIP: See meyersound.com for support and more information about MAPP.

MAPP Capabilities

With MAPP, the user can:

- Simulate different loudspeaker configurations to refine system designs and determine the best coverage for intended audience areas
- Model loudspeaker interactions to locate constructive and destructive interferences so that loudspeakers can be re-aimed and repositioned as necessary
- Place microphones anywhere in the Model View space and predict loudspeaker frequency response, phase response, and sound pressure levels at each microphone position
- Determine delay settings for fill loudspeakers using the Inverse Fast Fourier Transform and phase response feature
- Preview the results of signal processing to determine optimum settings for the best system response
- Automatically calculate load information for arrays to determine necessary minimum rigging capacity, front-to-back weight distribution, and center of gravity location
- Generate and export system images and system PDF reports for client presentations
- Synchronize GALAXY processor output channel settings in real time with virtual or real GALAXY units, allowing in-the-field changes to be predicted during system alignments.

GALILEO GALAXY NETWORK PLATFORM

The Galileo GALAXY Network Platform is a sophisticated loudspeaker management tool for controlling all Meyer Sound speaker types. The GALAXY loudspeaker processor extends a high level of audio control in driving and aligning loudspeaker systems with multiple zones. It provides a powerful tool set for corrective equalization (EQ) and creative fine-tuning for a full range of applications from touring to cinema.

Users can readily program the GALAXY processor using Compass software running on a host computer or via the Compass Go application for the iPad. Connecting MAPP to the GALAXY processor will also allow the user to push output channel settings created in MAPP as a starting point. Compass Control Software includes custom-designed settings for each family of speakers, as well as to integrate families together. For example, the Product Integration feature matches the phase characteristics between Meyer speaker families to ensure the most coherent summation.

Processing tools for inputs and outputs include delay, parametric EQ and U-Shaping EQ. Output processing also includes polarity reversal, Low-Mid Beam Control (LMBC), atmospheric correction, and All Pass filters.

The built-in summing and delay matrices allow a user to easily assign gain and delay values, respectively, at each cross point. This capability greatly facilitates using one loudspeaker to satisfy multiple purposes.

Front panel controls let a user intuitively and quickly operate a GALAXY processor without a computer during live use.

The GALAXY 408, GALAXY 816 and GALAXY 816-AES3 processor versions have the same audio processing capability with different I/O. See www.meyersound.com to locate their datasheets for more information.

APPENDIX A: MEYER SOUND WEATHER PROTECTION

The Weather Protection option from Meyer Sound is intended to increase the useful life of Meyer Sound loudspeakers when they are installed outdoors and exposed to different and often harsh weather conditions.

Meyer Sound Weather Protection includes a penetrating treatment to raw wood, use of special primers, and plating on all steel parts used (or alternatively, the use of stainless steel hardware). Weather Protection is designed to prevent malfunctions caused by harsh operating environments and slows the accelerated wear and tear that occurs in outdoor environments.

When Is Weather Protection Advisable?

Weather Protection is strongly recommended for all permanent outdoor installations where loudspeakers are directly exposed to the elements. This recommendation includes desert and semi-arid climates, where protection against dust and sand is important, and where infrequent rainstorms can contribute to deterioration of loudspeaker components.

Weather Protection is also recommended when the loudspeakers are sheltered from direct exposure to precipitation but are nevertheless exposed to prolonged high humidity, fog or mist. Examples would be installations on covered outdoor terraces or pavilions.

Weather Protection is further advisable for portable or touring systems when any significant outdoor use is anticipated. Even though standard procedures may call for using external protective measures, these are often not implemented in time to prevent moisture intrusions that could lead to premature performance degradation of the loudspeaker.

Climate Variation and Owner Maintenance

The wear and tear on a loudspeaker will vary significantly with different climatic conditions. For example, a weather-protected loudspeaker installed in a sunlight-exposed location on an ocean pier will experience much harsher conditions than a loudspeaker in a similar installation that is shaded by trees and exposed only to rainfall. The constant exposure to direct UV radiation and a salt air environment will cause a loudspeaker to wear more quickly than one with partial UV shielding and exposed only to freshwater moisture.

Wear can eventually affect the performance of the loudspeaker. It also affects aesthetics. For example, in salt

air environments, the exterior grille can quickly show signs of oxidation, causing unsightly discoloration.

Apart from selecting suitable weather protection, the progress of wear and tear on the loudspeaker can be slowed by a regular schedule of inspection and cleaning. This maintenance is particularly necessary in harsh environments. Inspection and cleaning should include routine removal of any visible oxidation or environmental particulates, as these can accelerate metal corrosion or decay of the cabinet. If installed loudspeakers are not in use for an extended period, exterior protection or temporary removal and storage of the loudspeakers should be considered.

Benefits of Weather Protection

There are several benefits to selecting the Meyer Sound Weather Protection option:

Functionality—Weather Protection prolongs the service life of the loudspeaker by preventing premature degradation of internal components.

Safety—Weather Protection lessens the chance of electrical malfunctions or structural failures.

 **WARNING:** IT IS THE RESPONSIBILITY OF PURCHASERS/USERS/OPERATORS TO SELECT WEATHER PROTECTION WHEN APPROPRIATE FOR THEIR USE AND TO PERIODICALLY INSPECT THEIR LOUDSPEAKER INSTALLATIONS FOR ANY DETERIORATION THAT MAY LEAD TO SAFETY CONCERNS.

Aesthetics—Weather Protection slows wear and tear on the exterior of the loudspeaker in harsh conditions. Early signs of wear and tear on the exterior of the loudspeaker indicate over-exposure to the elements.

Standards Compliance—Weather Protection helps in meeting IP ratings for loudspeakers. IP ratings are an internationally recognized standard often used in installations involving our products. A further explanation of IP ratings is given in the “IP Ratings” Section on page 31.

WEATHER PROTECTION COMPONENTS

Standard Weather Protection

Meyer Sound designs toward an IP rating of IPX4 (see “IP Ratings” on page 31) for Standard Weather Protection, which includes the following components:

- Wood treatment—Prior to cabinet manufacturing, the raw wood receives a special treatment that penetrates and stabilizes the wood fibers to withstand a wide range of temperatures and exposure to extreme humidity.
- Cabinet finishing—The assembled cabinets receive a highly impervious finish that includes a sealing primer and a finishing topcoat. The coatings are applied on both surfaces, with one coat on the interior and two on the exterior. The final step is a two-part modified acrylic urethane similar to that used in military applications.
- Driver treatment—All cone drivers are coated with a water-resistant sealant.
- Exterior protection—Grille frames are coated to resist corrosion, and all components that mount to the cabinet use custom gaskets and stainless steel fasteners.
- Removable rain hood—The rain hood is designed to shield connectors even in wind-driven rain.

modifies a Meyer Sound supplied rigging component to support their installation method, it is considered compromised and out of warranty.

- All loudspeaker cabling must be installed with a “drip-loop” or equivalent method to ensure that rain or water is NOT wicked toward the loudspeaker.

If in doubt about an installation method, contact Meyer Sound Technical Support for assistance.

Always discuss the environmental conditions of your Meyer Sound installation with your Sales Manager, and verify the availability of Weather Protection for your selected loudspeaker models. The Sales Manager, together with Technical Support, will verify the appropriate level of weather protection for the loudspeakers and related rigging hardware.

INSTALLATION PRACTICES

Meyer Sound assumes normal and accepted installation practices are used when installing Meyer Sound Loudspeakers outdoors. Deviation from such practices may cause weather protection to be ineffective and void the warranty for the loudspeaker.

Examples of unacceptable and acceptable installation practices include:

- Loudspeakers installed outdoors should not face upward.
- Loudspeakers with a rain hood should be installed in such a way that the rain hood opening is not facing any direction but down.
- Meyer Sound-supplied rigging components should not be modified (for example, by drilling additional holes in a MUB for mounting to a wall). When an installer/integrator

IP RATINGS

IP stands for “Ingress Protection.” The current format for expressing an IP rating is a 2-digit code. The first digit of an IP rating represents protection from solid objects. The second digit of an IP rating represents protection from water or moisture. Table 5 provides a chart of IP ratings and the corresponding definitions of the rating.



NOTE: IP ratings only apply to the “ENCLOSURE.” A loudspeaker is considered an enclosure and as such an IP rating can be applied to it. Rigging hardware is not an enclosure and therefore IP ratings do not apply. Also, cable and cable-mount connectors used to connect to the loudspeaker are NOT part of the enclosure and therefore not part of the IP rating. Only the chassis-mounted part of the connector is considered part of the enclosure.

Table 5: IP Ratings Definition Chart

First Digit (Protection against solid objects)	Definition	Second Digit (Protection against liquids)	Definition
X	Characteristic numeral is not required to be specified.	X	Characteristic numeral is not required to be specified.
0	No protection.	0	No protection.
1	Protected against solid objects over 50 mm.	1	Protected against vertically falling drops of water.
2	Protected against solid objects over 12 mm.	2	Protected against direct sprays up to 15° from the vertical.
3	Protected against solid objects over 2.5 mm.	3	Protected against direct sprays up to 60° from the vertical.
4	Protected against solid objects over 1 mm.	4	Protected against direct sprays from all directions. Limited ingress permitted.
5	Protected against dust. Limited ingress permitted.	5	Protected against low-pressure jets of water from all directions. Limited ingress permitted.
6	Totally protected against dust.	6	Protected against strong jets of water from all directions. Limited ingress permitted.
		7	Protected against the effect of temporary immersion between 15 cm and 1 m.
		8	Protected against the effect of long-term submersion of 1 m or more.

APPENDIX B: RAIN HOOD

Weather-protected USW-210P loudspeakers include a rain hood for indoor/outdoor touring and sheltered outdoor installations.

CAUTION: There is only one proper loudspeaker orientation once the rain hood is installed—horizontal with the cables exiting at the bottom. With any other orientation, there is a potential for water to intrude into the cabinet. Never place the cabinet in a vertical position in outdoor applications.

RIGID RAIN HOOD

The USW-210P rigid removable rain hood is easily attached and removed with the included four screws (Figure 25).

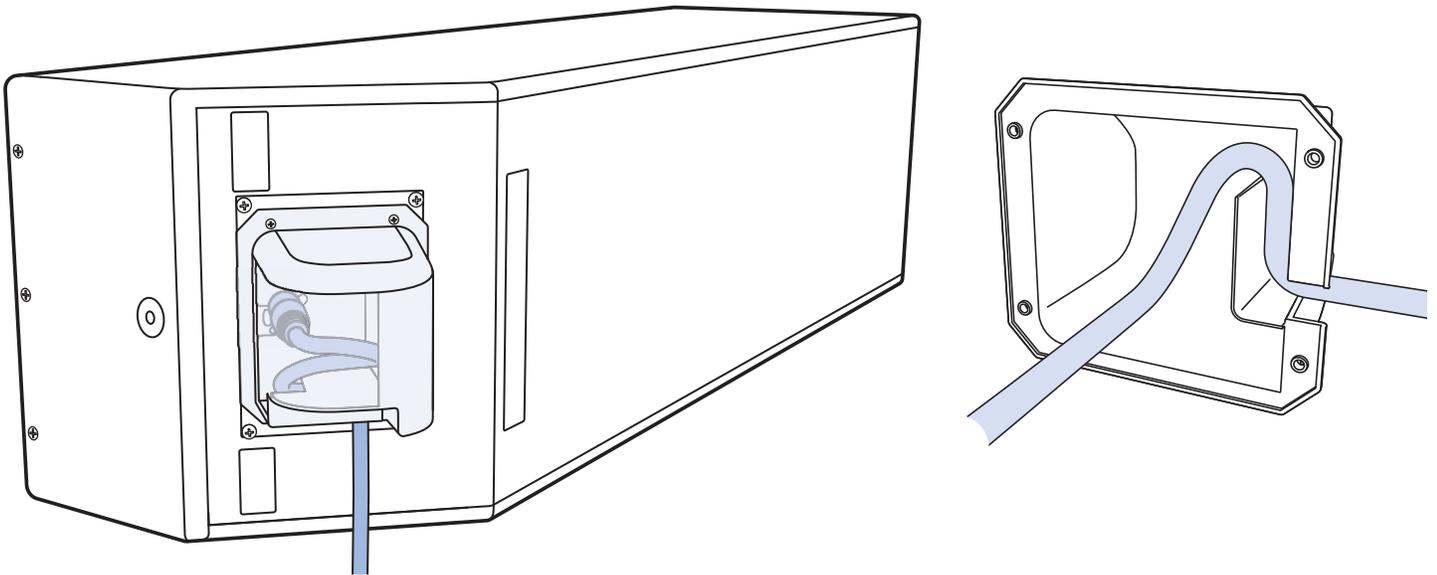


Figure 25: USW-210P with rigid rain hood (left) and interior cable routing illustration (right)

To attach the USW-210P rigid rain hood:

1. Attach any required cables to the USW-210P loudspeaker.
2. Carefully route the cables, so that they wrap over and down the inner rainhood wall.
3. Attach the rain hood to the user panel, and secure it to the center of the panel with its four 6-32 x 0.38-inch screws.
4. Make sure to tighten the screws to create a good seal against the user panel. The recommended torque value for the screws is 10–12 in-lb (1.1–1.4 N-m).

CAUTION: The weather-protected USW-210P must be mounted with a 0° tilt, or preferably with a slight down-tilt. This angle shields the driver from the elements and does not allow water to accumulate. Do not tilt the cabinet up, as the drivers and cabinet will accumulate water.

CAUTION: Weather-protected units using the rigid rain hood are rated IPX4 for water intrusion.

APPENDIX C: USW-210P SPECIFICATIONS


USW-210P ACOUSTICAL, ELECTRICAL, AND PHYSICAL SPECIFICATIONS

ACOUSTICAL USW-210P	
Operating Frequency Range	30–140 Hz Note: Recommended maximum operating frequency range. Response depends on loading conditions and room acoustics.
Frequency Response	32–123 Hz \pm 4 dB Note: Measured in half-space with 1/3 octave frequency resolution at 4 meters.
Phase Response	40–123 Hz \pm 30°
Linear Peak SPL	126 dB with crest factor >11.5 dB (M-noise) , 126 dB (Pink Noise), 127 dB (B-noise) Note: Linear Peak SPL is measured in half-space at 4 m referred to 1 m. Loudspeaker SPL compression measured with M-noise at the onset of limiting, 2-hour duration, and 50-degree C ambient temperature is < 2 dB. M-noise is a full bandwidth (10 Hz–22.5 kHz) test signal developed by Meyer Sound to better measure the loudspeaker's music performance. It has a constant instantaneous peak level in octave bands, a crest factor that increases with frequency, and a full bandwidth Peak to RMS ratio of 18 dB. The presence of a greater-than (>) symbol with regard to crest factor indicates it may be higher depending on EQ and boundary loading. Pink noise is a full bandwidth test signal with Peak to RMS ratio of 12.5 dB. B-noise is a Meyer Sound test signal used to ensure measurements reflect system behavior when reproducing the most common input spectrum, and to verify there is still headroom over pink noise.
TRANSDUCERS	
Low Frequency	Two 10-inch cone drivers; 4 Ω nominal impedance
AUDIO INPUT	
Type	Differential, electronically balanced
Maximum Common Mode Range	\pm 15 V DC, clamped to earth for voltage transient protection
Connectors	XLR 3-pin female input with male loop output
Input Impedance	10 k Ω differential between pins 2 and 3
Wiring	Pin 1: Chassis/earth through 1 k Ω , 1000 pF, 15 V clamp network to provide virtual ground lift at audio frequencies Pin 2: Signal + Pin 3: Signal – Case: Earth ground and chassis
Nominal Input Sensitivity	0 dBV (1 V rms) continuous average is typically the onset of limiting for noise and music
Input Level	Audio source must be capable of producing +20 dBV (10 V rms) into 600 Ω to produce maximum peak SPL over the operating bandwidth of the loudspeaker
AMPLIFIER	
Type	Two-channel Class D
Total Output Power	1800 W peak Note: Peak power based on the maximum unclipped peak voltage the amplifier will produce into the nominal load impedance.
THD, IM TIM	<.02%
Cooling	Convection


AC POWER	
Connectors	powerCON 20 input with loop output
Automatic Voltage Selection	90–265 V AC, 50–60 Hz
Safety Agency Rated Operating Voltage	100–240 V AC, 50–60 Hz
Turn On/Turn Off Points	90 V AC turn-on, no turn-off; internal fuse protection above 265 V AC
Current Draw	
Idle Current	0.27 A rms (115 V AC); 0.25 A rms (230 V AC); 0.29 A rms (100 V AC)
Maximum Long-Term Continuous Current	1.4 A rms (115 V AC); 0.7A rms (230 V AC); 1.6 A rms (100 V AC)
Burst Current	4.5 A rms (115 V AC); 2.1 A rms (230 V AC); 4.8 A rms (100 V AC) Note: AC power cabling must be of sufficient gauge so that under burst current rms conditions, cable transmission losses do not cause the loudspeaker's voltage to drop below the specified operating range.
Maximum Instantaneous Peak Current	9.7 A peak (115 V AC); 4.6 A peak (230 V AC); 10.8 A peak (100 V AC)
Inrush Current	<20 A peak
RMS NETWORK (OPTIONAL)	
	Two-conductor twisted-pair network that reports all operating parameters of amplifiers to system operator's host computer.
PHYSICAL	
Dimensions	W: 12.00 in (304.8 mm) x H: 41.33 in (1049.8 mm) x D: 12 in (304.8 mm)
Weight	56 lb (25.4 kg)
Enclosure	Premium multi-ply birch with slightly textured black finish
Protective Grille	Powder-coated, stamped steel
Rigging	Top and bottom mounting points with M8 threads
ENVIRONMENTAL	
Operating Temperature	0 °C to +45 °C
Non Operating Temperature	–40 °C to +75 °C
Humidity	To 95% at 45 °C (non-condensing)
Operating Altitude	To 5,000 m (16,404 ft)
Non Operating Altitude	To 12,000 m (39,000 ft)
Shock	30 g 11 msec half-sine on each of 6 sides
Vibration	10 Hz – 55 Hz (0.010 m peak-to-peak excursion)



USW-210P LOUDSPEAKER DIMENSIONS



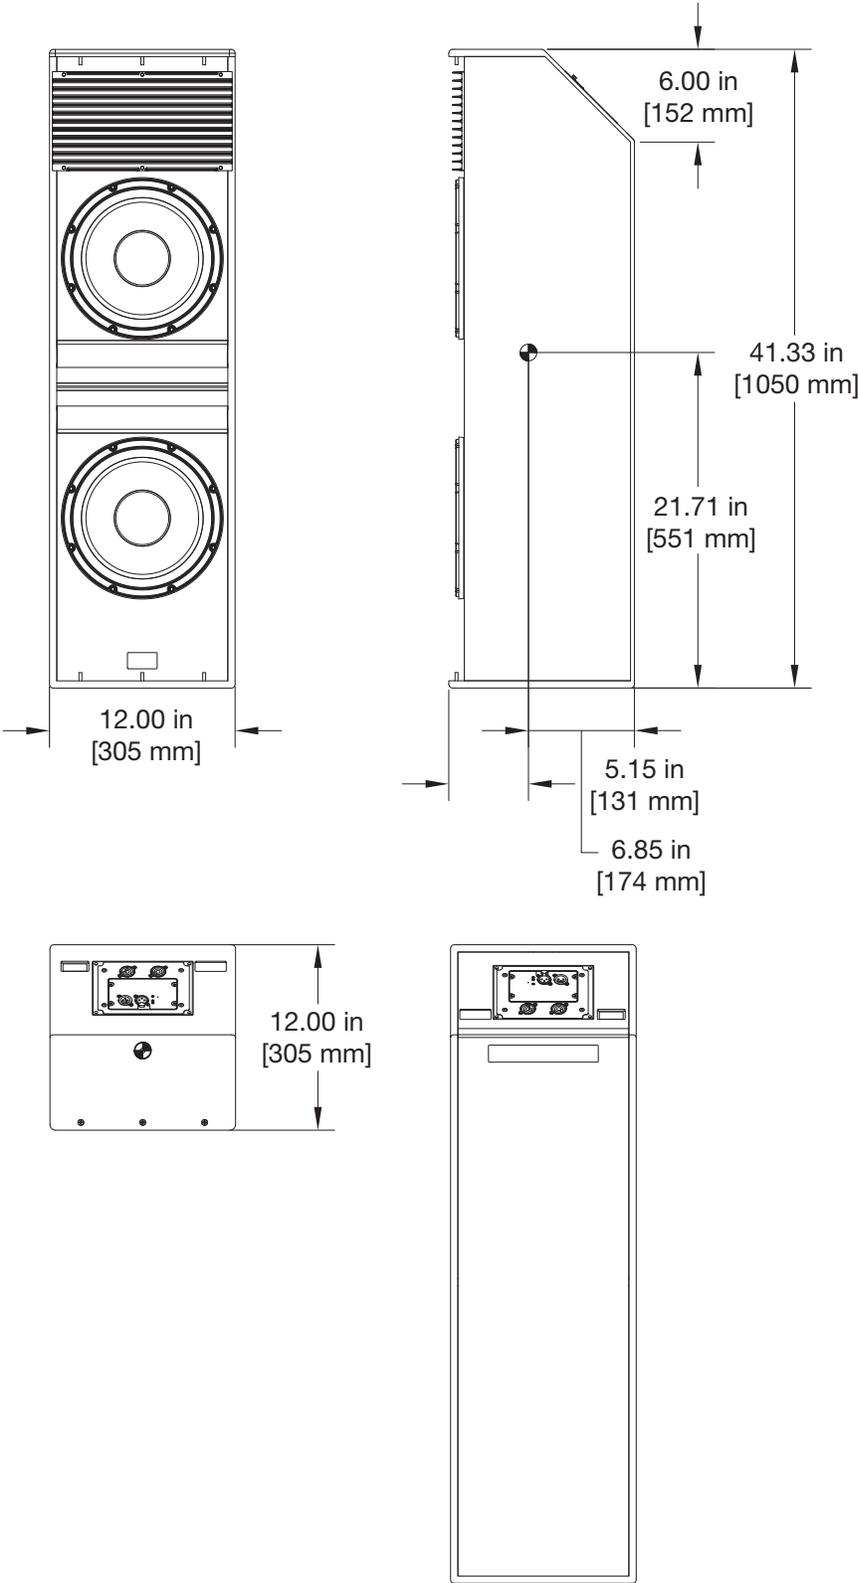


USW-210P LOUDSPEAKER WITH RAIN HOOD DIMENSIONS

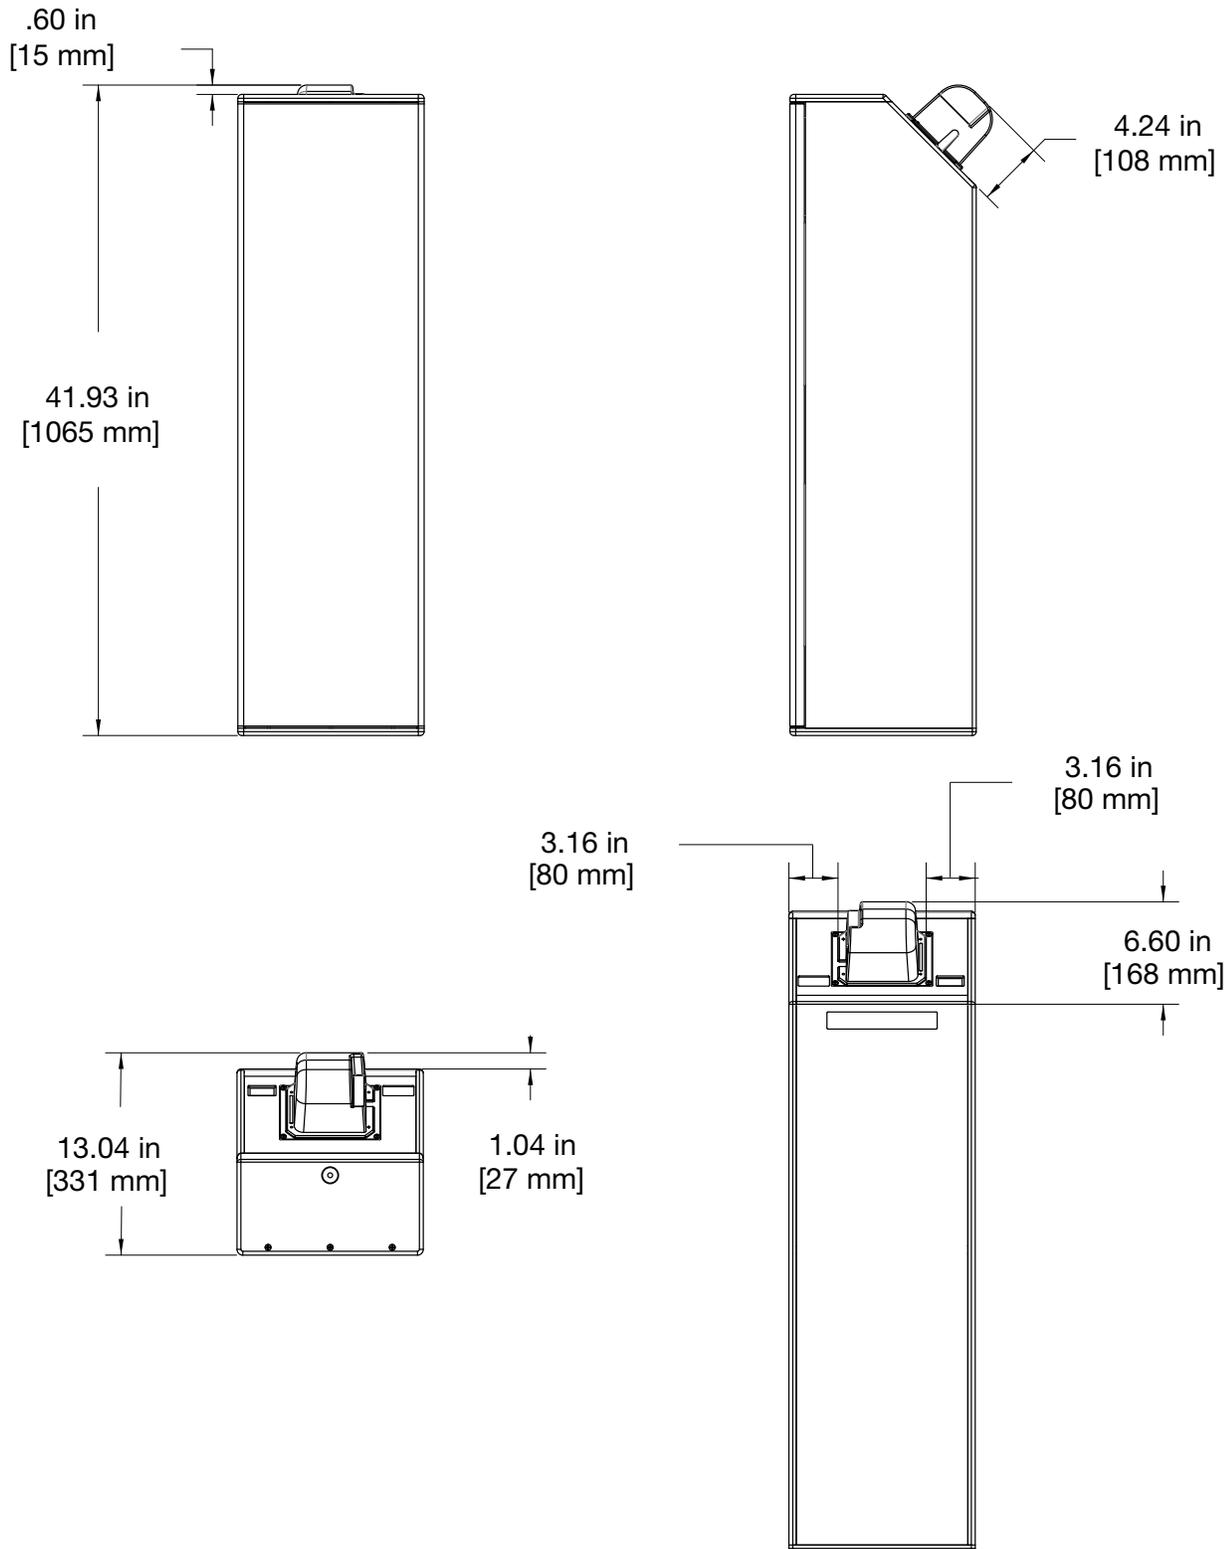


MUB-USW-210P DIMENSIONS






Self-weight: 12 lb [5.4 kg]
Load rating 5:1: 56 lb [25.4 kg]
(1 USW-210P)

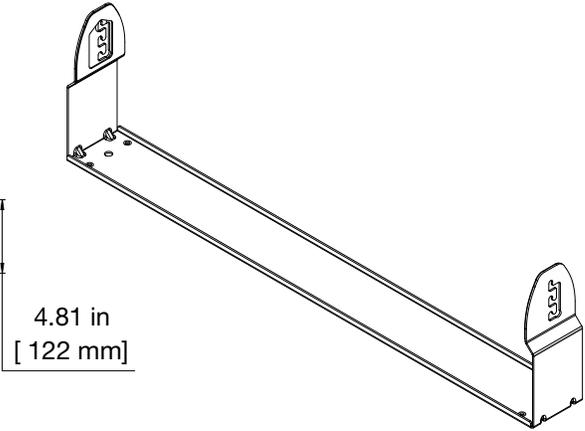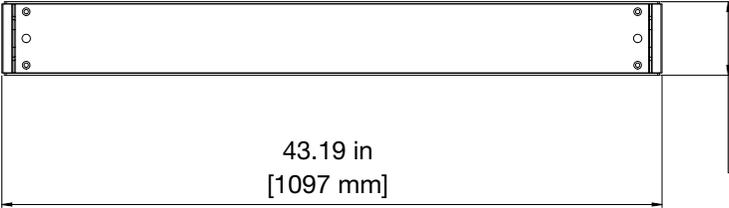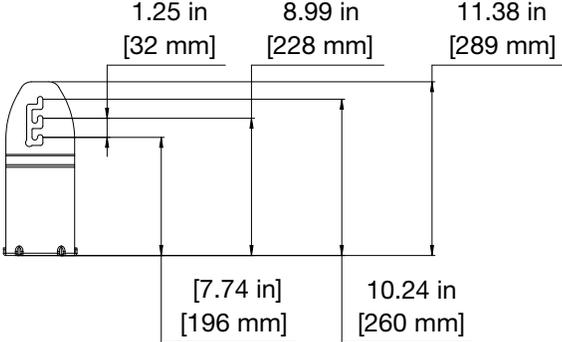

USW-210P WITH MUB-USW-210P DIMENSIONS

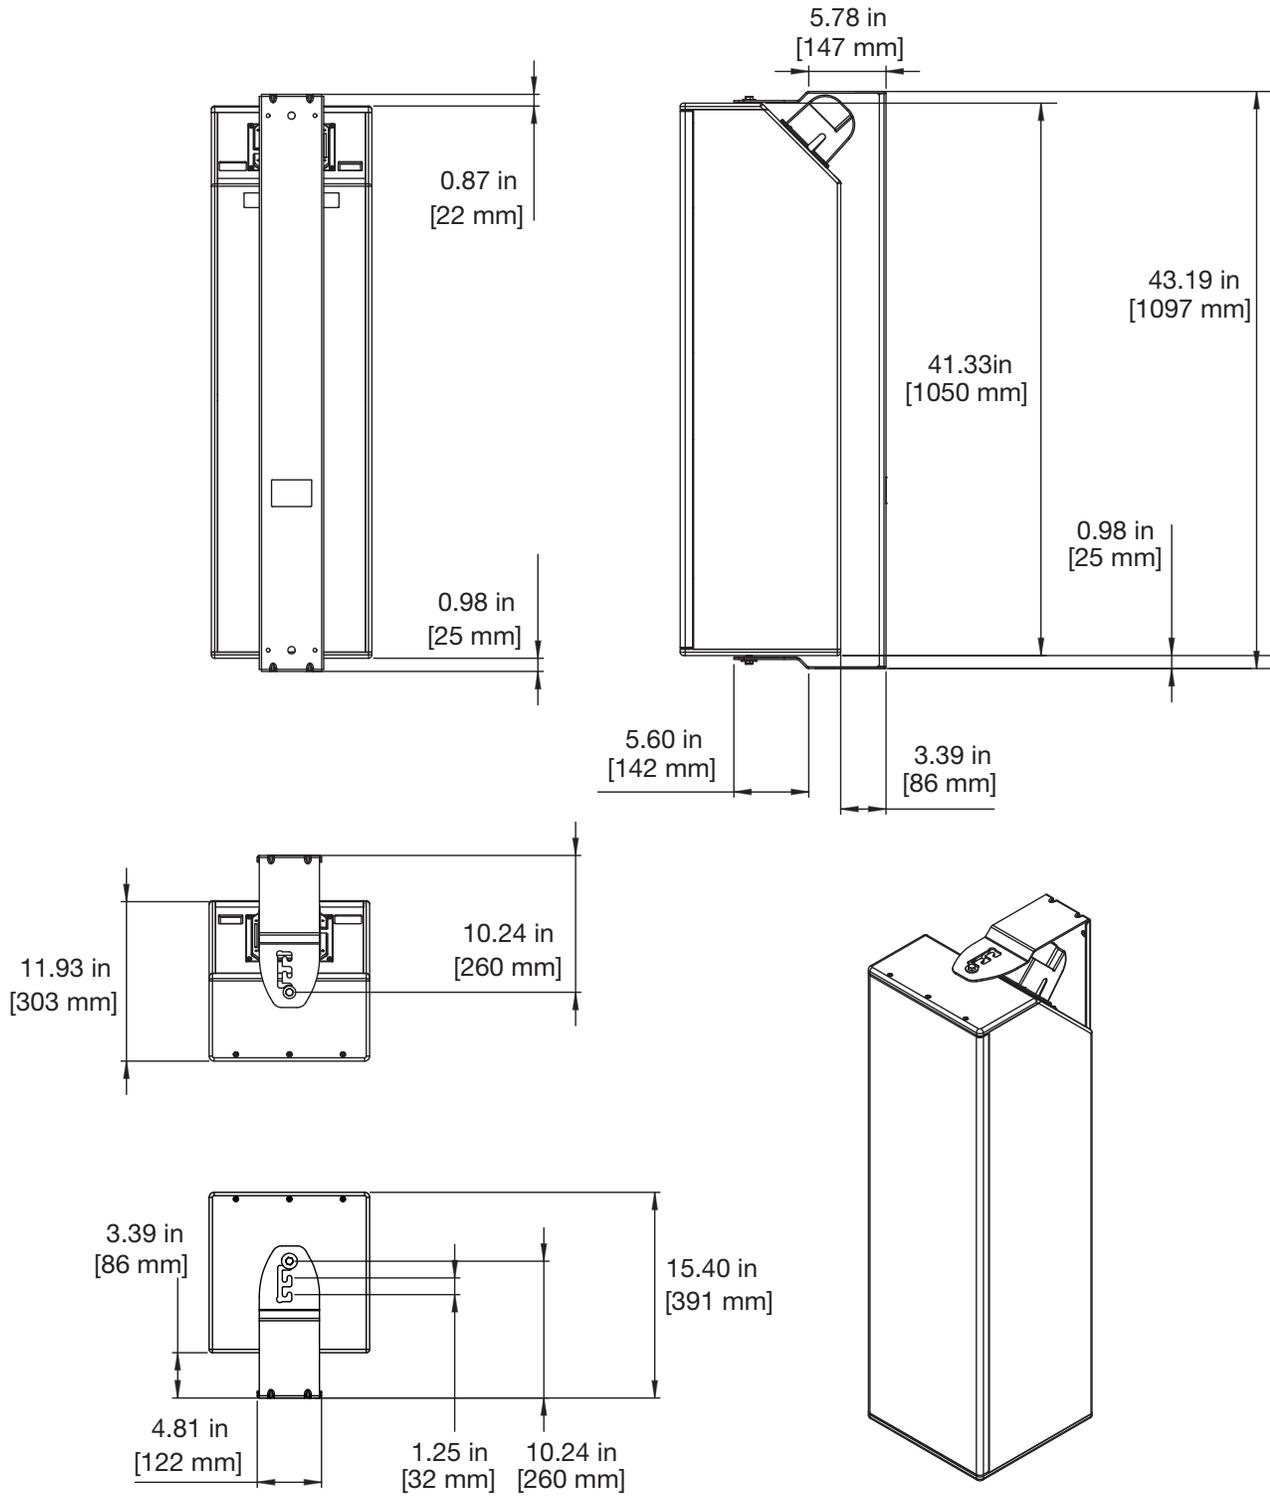

MBP-USW-210P DIMENSIONS

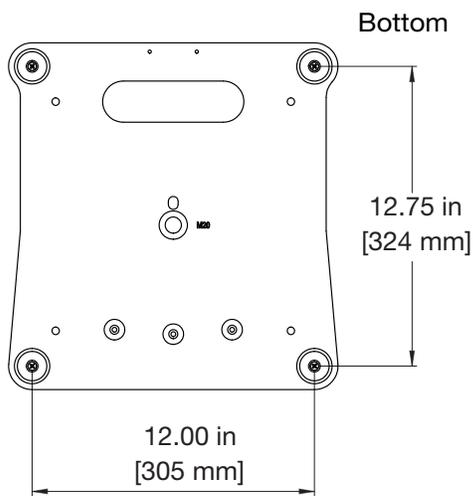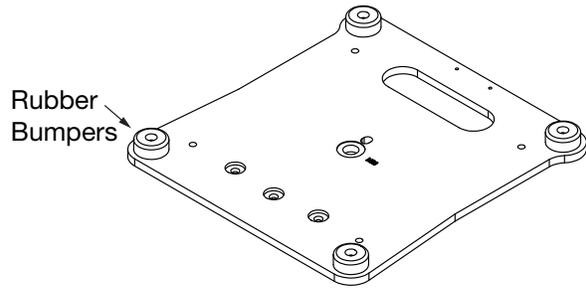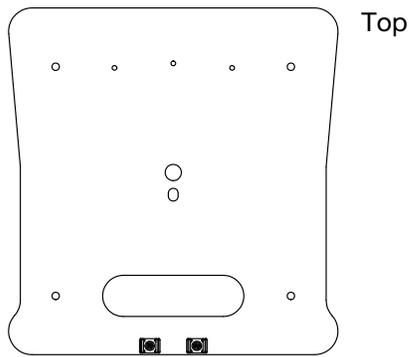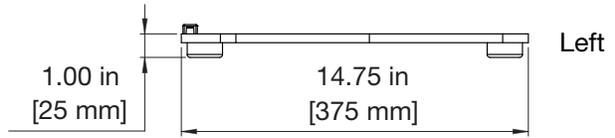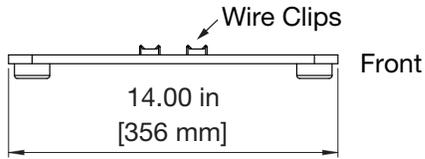

Bottom View





THINKING SOUND

Meyer Sound Laboratories Inc.
2832 San Pablo Avenue
Berkeley, CA 94702

meyersound.com
T: +1 510 486.1166

© 2019, 2020
Meyer Sound Laboratories Inc. All rights reserved
USW-210P Operating Instructions PN 05.277.005.01 A4